


**VG02008ST**

THE MEASUREMENTS IN INCHES ARE ROUNDED TO THE NEAREST 1/16"

## PACKAGE CONTENT

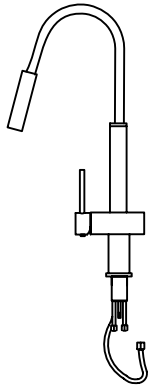

FAUCET ASSEMBLY



COUNTERWEIGHT (2PC.)



RUBBER RING

TWO FLEXIBLE HOSE 15' LONG



SPRAY HOSE WASHER



BASE RING



NUT



FAUCET WASHER

## MAINTENANCE

Your new faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.

## TOOLS

Adjustable wrench  
Groove joint pliers  
Plumber's putty  
Pipe tape  
Phillips and flat screwdrivers

## SAFETY TIPS

If you use soldering for the installation of the faucet, the seats cartridges and washers will have to be removed before using flame. Otherwise, warranty will be void on these parts  
Protect your eyes with safety glasses when cutting or soldering water supply line  
Cover your drain to avoid loosing parts

## IMPORTANT POINTS

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release build-up pressure.  
When installing your new faucet, turn the connector nuts finger-tight, then use one wrench to anchor the fitting and a second wrench to tighten the nut one additional turn. Connections that are too tight will reduce the integrity of the system.  
Wrap all threaded connections with Teflon tape available at your local hardware or plumbing supply store. Always wrap in a clockwise direction.  
All installations can vary depending on how your previous faucet was installed. Not all necessary supplies to install your faucet are included; however they are available wherever plumbing supplies are sold.

**For additional assistance visit:**

<http://www.vigoindustries.com>


## ASSEMBLY

VIGO®


<http://www.vigoindustries.com>

NOTE: INSTALLATION MUST BE DONE BY A QUALIFIED, LICENSED PLUMBER.


1. SHUT OFF WATER SUPPLY. REMOVE THE OLD FAUCET AND FLEXIBLE HOSES. CLEAN SINK SURFACE IN PREPARATION FOR THE NEW FAUCET.

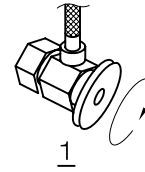

2. PLACE BASE RING AND RUBBER RING TO THE BOTTOM SURFACE OF THE FAUCET. SCREW MALE END OF FLEXIBLE HOSES TO THE FAUCET

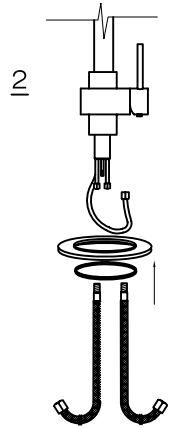

3. PLACE THE NEW FAUCET IN POSITION ON THE SINK. FROM UNDER THE SINK, THREAD NUT ONTO THE FAUCET. TIGHTEN THE NUT.


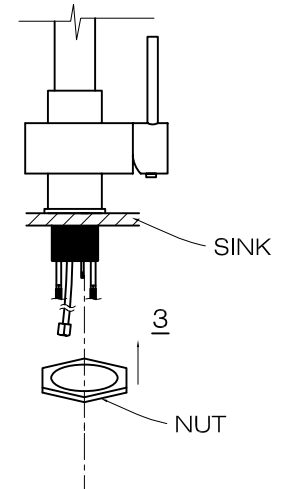


4. SCREW SPRAY HOSE TO THE PIN. ATTACH TWO SUPPLIED COUNTERWEIGHTS TO THE HOSE.

5. RELEASE THE FAUCET HOSE FROM THE HOLDER. PLACE THE WASHER BETWEEN THE NOZZLE HOSE AND THE NOZZLE AND SCREW THE NOZZLE TO THE HOSE.

6. CONNECT THE FEMALE END OF THE FLEXIBLE HOSES TO THE COLD AND HOT WATER SUPPLY.

7. AFTER INSTALLATION IS COMPLETE, TURN ON THE WATER SUPPLY VALVES AND ALLOW BOTH HOT AND COLD WATER TO RUN AT LEAST ONE MINUTE EACH. WHILE WATER IS RUNNING, CHECK FOR LEAKS, ESPECIALLY AT HOOK-UPS TO SUPPLY LINES. TIGHTENING NUTS SLIGHTLY WILL STOP ANY MINOR LEAKS.

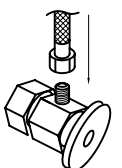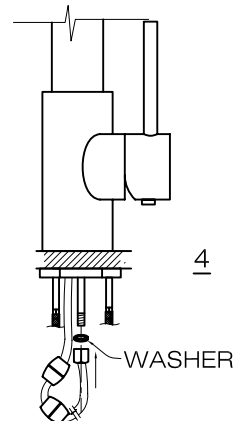

5

